

# TM 9-1410-250-12/1

DEPARTMENT OF THE ARMY TECHNICAL MANUAL

---

*Loss*

OPERATOR AND ORG MAINTENANCE  
MANUAL:

INTERCEPT-AERIAL  
GUIDED MISSILE MIM-14A AND MIM-14B  
(NIKE-HERCULES AND IMPROVED  
NIKE-HERCULES AIR DEFENSE  
GUIDED MISSILE SYSTEMS)

This copy is a reprint which includes current pages from Changes 1 through 4. Pages applying to all systems are inserted in proper numerical order in the manual. Pages which have different effectivities are inserted in the front of the manual. Read the instructions concerning these pages before using the manual.



HEADQUARTERS, DEPARTMENT OF THE ARMY

NOVEMBER 1967

By Order of the Secretary of the Army:

HAROLD K. JOHNSON,  
*General, United States Army,*  
*Chief of Staff.*

Official:

KENNETH G. WICKHAM  
*Major General, United States Army,*  
*The Adjutant General.*

Distribution:

To be distributed in accordance with DA Form 12-32, Section II, requirements for organizational maintenance applicable to the Nike Hercules and Improved Nike Hercules missile systems.

★ U. S. GOVERNMENT PRINTING OFFICE : 1972 O - 460-326

★ U.S. GOVERNMENT PRINTING OFFICE: 1971-427-202/1393

TECHNICAL MANUAL }  
No. 9-1410-250-12/1 }

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D. C., 27 November 1967

## Operator and Organizational Maintenance Manual:

### INTERCEPT-AERIAL GUIDED MISSILE MIM-14A AND MIM-14B (NIKE-HERCULES AND IMPROVED NIKE-HERCULES GUIDED MISSILE SYSTEMS)

	Paragraphs	Pages
PART ONE. ASSEMBLY AND SERVICE OPERATIONS		
CHAPTER 1. INTRODUCTION .....	1-1-1-11	1-1-1-2
CHAPTER 2. PARTS, TOOLS, AND EQUIPMENT		
Section I. Parts, common tools, and equipment .....	2-1-2-3	2-1
II. Special tools and equipment and fabricated tools .....	2-4-2-6	2-1-2-3
CHAPTER 3. ASSEMBLY OF THE MISSILE FOR ELECTRICAL CHECKOUT		
Section I. General .....	3-1-3-3.1	3-1-3-3
II. Inspection of containers .....	3-4, 3-5	3-8
III. Uncrating and assembling the missile .....	3-6-3-14	3-8-3-33
CHAPTER 4. AIR AND OIL SERVICING AND MISSILE ELECTRICAL CHECKOUT		
Section I. Air and oil servicing the accessory power supply (APS) .....	4-1-4-7	4-1-4-8
II. Air and oil servicing the hydraulic pumping unit (HPU) .....	4-8-4-11	4-25, 4-26
III. Missile electrical checkout .....	4-12-4-16	4-43-4-73
IV. Fuel servicing and operational test (hot-run) of the accessory power supply (APS) .....	4-17-4-19	4-74-4-80
CHAPTER 5. UNCRATING AND INSTALLING THE MISSILE ROCKET MOTOR ASSEMBLY		
Section I. Preliminary procedures .....	5-1-5-6.1	5-1-5-4.1
II. Uncrating the missile rocket motor subassembly .....	5-7, 5-8	5-6-5-7
III. Installation of the missile rocket motor subassembly .....	5-9, 5-10	5-12-5-14
CHAPTER 6. UNCRATING AND INSTALLING THE WARHEAD BODY SECTION		
Section I. Electrical cable connections .....	6-1-6-3	6-1-6-4
CHAPTER 7. FINAL PREPARATION OF THE WARHEAD BODY SECTION AND THE FORWARD BODY SECTION		
Section I. Electrical cable connections .....	7-1-7-4	7-1-7-3
II. Installation of the forward main fin and the forward body section .....	7-5-7-10	7-7-7-16
III. Installation of the rear roll ring .....	7-11, 7-12	7-17-7-18
CHAPTER 8. ASSEMBLY OF THE ROCKET MOTOR ASSEMBLY	8-1-8-9	8-1-8-22
CHAPTER 9. JOINING PROCEDURES FOR THE MISSILE BODY AND ROCKET MOTOR CLUSTER		
Section I. Transporting the missile body and the rocket motor cluster to the launching area .....	9-1, 9-2	9-1-9-4
II. Joining the missile body and the rocket motor cluster on the launching-handling rail .....	9-3-9-8	9-8-9-16

\*This manual, together with TM 9-1410-250-12/2, supersedes TM 9-1410-250-12, 21 February 1963, including all changes and TM 9-1410-250-12/2, 2 April 1964.



	Paragraphs	Pages
CHAPTER 10. FINAL PREPARATION OF THE MISSILE	10-1-10-6	10-1-10-17
PART TWO. DEACTIVATION, CORRECTIVE MAINTENANCE, AND STORAGE		
CHAPTER 11. NORMAL DEACTIVATION PROCEDURES	11-1-11-3	11-1
Section I. General	11-4-11-7	11-1-11-4
II. Preliminary procedures		
III. Removal of the missile from the launching area, using guided missile low-bed trailer M529	11-8, 11-9	11-5
IV. Removal of the missile body from the launching-handling rail	11-10-11-11	11-6-11-7
V. Removal of the rocket motor cluster from the launching-handling rail	11-12, 11-13	11-8
VI. Removal of the forward body section	11-14, 11-15	11-9
VII. Removal of the forward main fins and preparation for removal of the warhead body section	11-16-11-19	11-10, 11-11
VIII. Removal of the warhead body section	11-20-11-22	11-11, 11-12
IX. Removal of the missile rocket motor subassembly	11-23-11-26	11-13-11-15
X. Defueling, depressurizing, and purging the accessory power supply (APS)	11-27-11-31	11-16-11-18
XI. Removing and packaging the main fins and the elevons	11-32-11-34	11-20
XII. Preparation of the forward and rear body sections for shipment or storage	11-35-11-37	11-21, 11-22
CHAPTER 12. CORRECTIVE MAINTENANCE	12-1-12-3	12-1-12-6
Section I. General		
II. Corrective maintenance of the missile guidance set (MUSHROOM)	12-4-12-21	12-7-12-25
III. Corrective maintenance of the missile guidance set (STOVEPIPE)	12-21, 1-12-46	12-25-12-45
IV. Corrective maintenance of the forward body section	12-47-12-55	12-45-12-50
V. Corrective maintenance of the warhead body section	12-56-12-60	12-51-12-54
VI. Corrective maintenance of the missile motor section	12-61-12-64	12-55, 12-56
VII. Corrective maintenance of the equipment section	12-65-12-68	12-56-12-58
VIII. Corrective maintenance of the accessory power supply (APS) and the hydraulic pumping unit (HPU)	12-69-12-73	12-59-12-69
IX. Accessory power supply (APS) servicing system cleanup-launching area	12-74-12-79	12-70-12-76
X. Hydraulic pumping unit (HPU) servicing and system cleanup-launching area	12-80-12-84	12-81-12-84
XI. Corrective maintenance of the actuator section	12-85-12-87	12-86, 12-87
XII. Corrective maintenance of main fins and elevons	12-88-12-90	12-90, 12-91
XIII. Corrective maintenance of the shipping and storage containers	12-91-12-99	12-91-12-96
XIV. Corrective maintenance of the rocket motor cluster	12-100-12-117	12-96-12-103
CHAPTER 13. WINTERIZATION INSTRUCTIONS	13-1-13-4	13-1-13-3
Section I. General		
II. Rocket motor cluster winterization kit	13-5-13-20	13-6-13-22
III. APS and battery box winterization kit	13-21-13-24	13-22-13-25
IV. Corrective maintenance of winterization kits	13-25-13-27	13-26-13-27
CHAPTER 14. NIKE-HERCULES GUIDED MISSILE TRAINING BODY SECTION M84	14-1, 14-2	14-1
Section I. General		
II. Physical description	14-3-14-8	14-1-14-3
III. Shipment, inspection, and uncrating	14-9-14-15	14-8-14-14
IV. Assembly procedures	14-16-14-26	14-14-14-16
V. Disassembly procedures	14-27-14-37	14-16, 14-17
VI. Corrective maintenance	14-38-14-41	14-18
CHAPTER 15. HANDLING, SHIPMENT, AND LIMITED STORAGE	15-1-15-4	15-1, 15-2
Section I. General		
II. Shipment	15-5-15-7	15-2-15-5
III. Limited storage	15-8-15-18	15-7-15-12
IV. Torque requirements	15-19-15-21	15-14
APPENDIX A. BASIC ISSUE ITEMS LIST	A-1-A-5	A-1-A-8
INDEX		1